



SHINGLES PLUS INSTALLATION

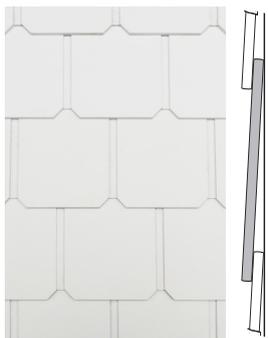

CLASSIC SHINGLES PLUS SMOOTH

Length: 1196mm
Width: 225mm

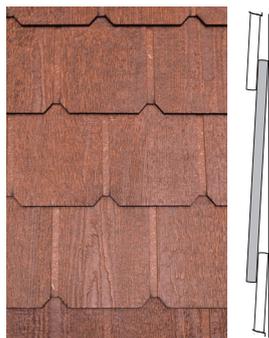


CLASSIC SHINGLES PLUS NATURAL

Length: 1196mm
Width: 225mm

Refer to installation manual for other accessories required

WEATHERGROOVE JOINER
(To be cut to 205mm lengths for Shingles Plus joiners)

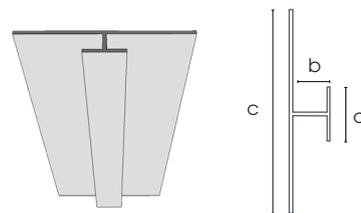

L = 3660, 2745, 2440mm
a = 12mm
b = 5mm
c = 50mm


SHINGLES PLUS INSTALLATION

These instructions are only to be used as a guide. For complete installation instructions please refer to the latest Installation Manual.

First Row: Set a horizontal datum line to align the first row. Allow a minimum overlap of 40mm. Fix a 35mm x 9.5mm strip of Weathertex 25mm up from the datum. Level the bottom edge of the board with the datum line. Fasten the bottom edge through the Weathertex strip into the timber framing. Cut Weathergroove joiner into 205mm joiners, fit these joiners as work proceeds. Where weathertightness is required add a bead of suitable sealant in each groove where the next row overlaps.

Successive Rows: Use the storey rod or lap gauge to position weatherboards and maintain uniform rows. Check rows for level. At laps, fasten through both Shingles into the stud. Use one fastener per stud, located at least 30mm from bottom edges and 12mm from ends. Fasteners per fastening guide for classic planks.

Please refer to construction details found on the Weathertex website for all window, doors and penetrations.

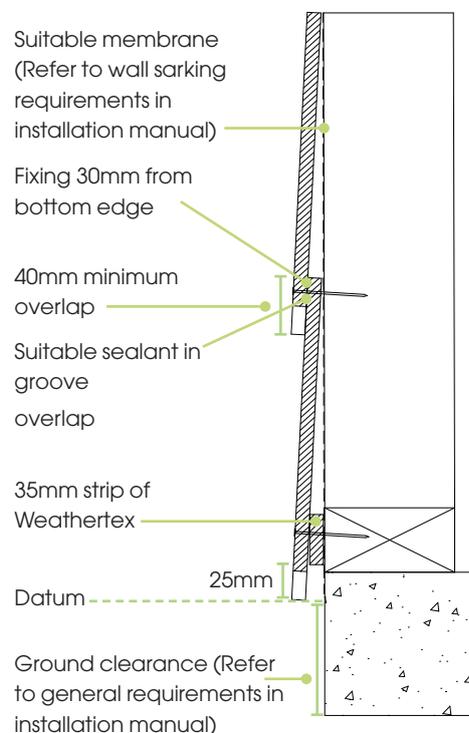

SHINGLES PLUS JOINING

Form joins between weatherboard ends using the 205mm cut lengths of Weathergroove joiner - refer to the Accessories Section. Add a small bead of polyurethane sealant/adhesive at the top of the joiner under the lap to ensure that the joiner cannot slip. Stagger joins randomly or brick lay throughout the wall with joins being formed midway between the studs. Simply cut joiners to fit at window heads, sills and eaves as required.

